



Import instruction ArchiCAD (v1)

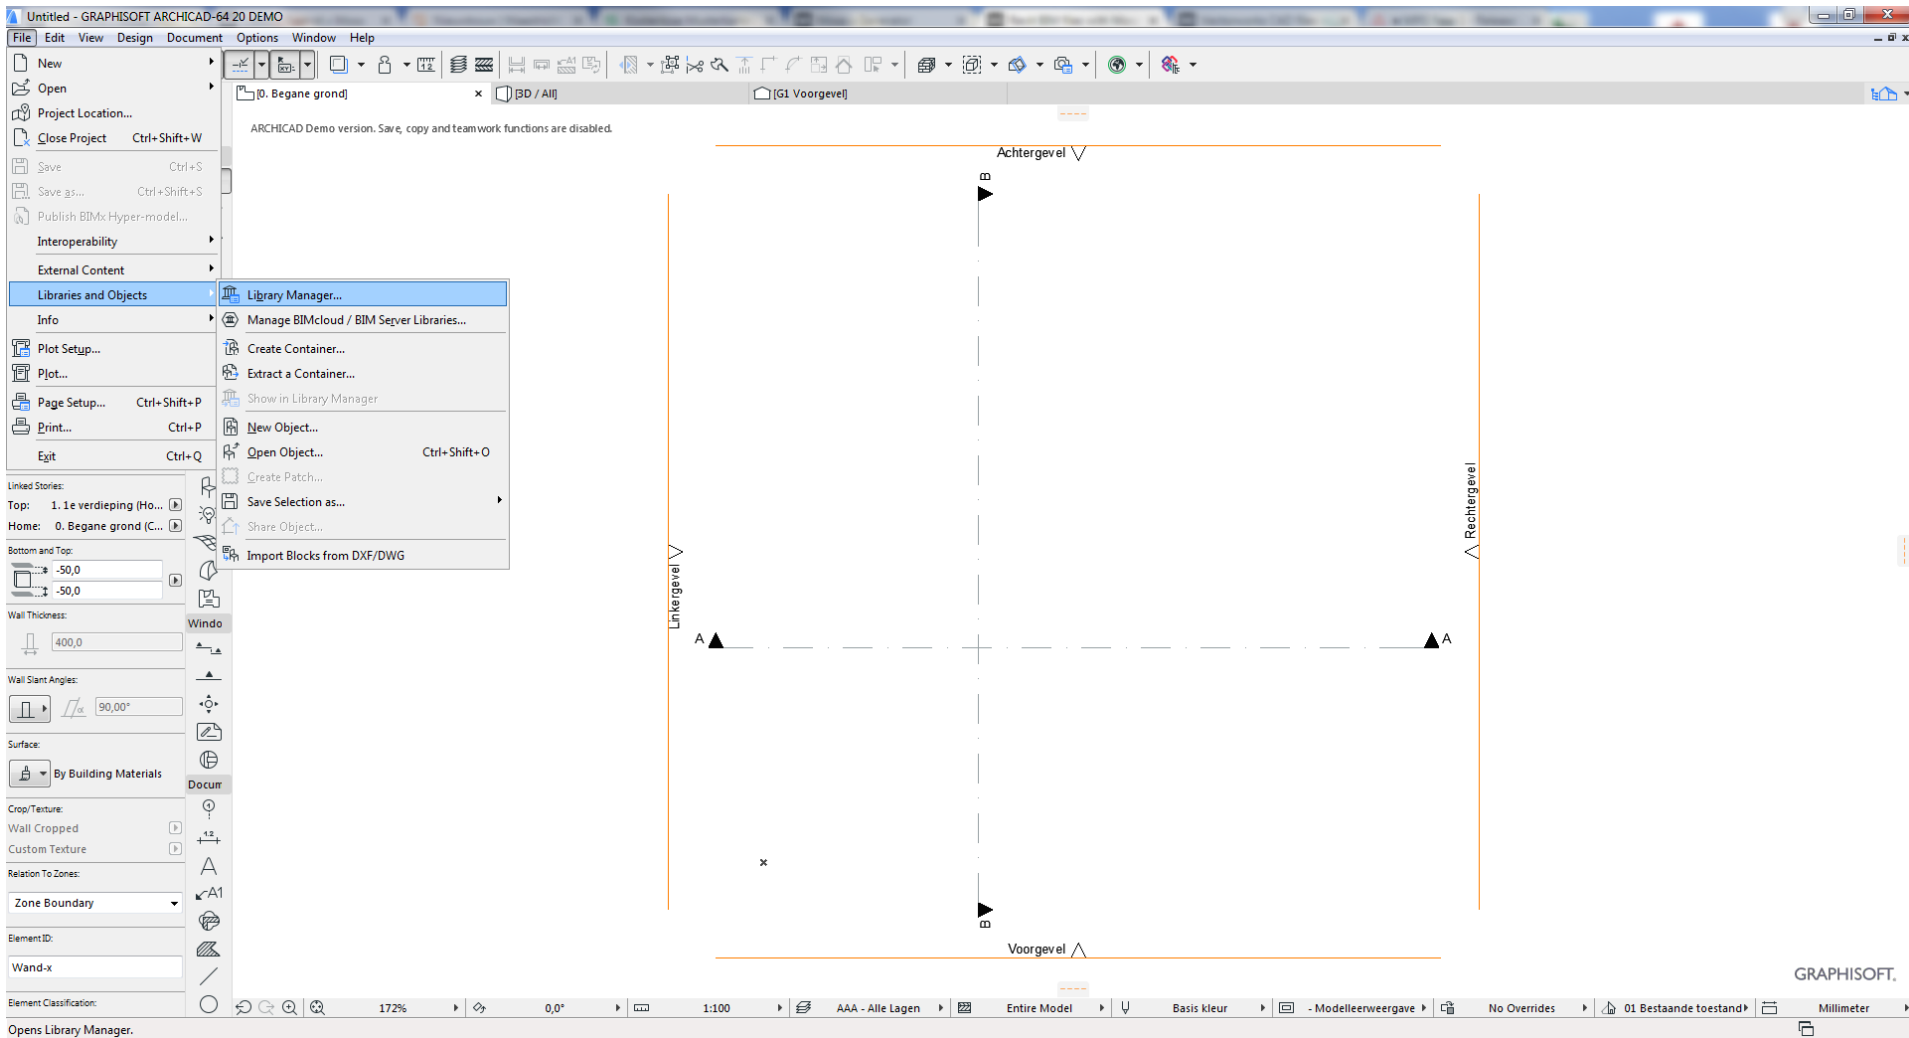


Go to File -> Libraries and Objects -> Library Manager

Import instruction ArchiCAD (v1)

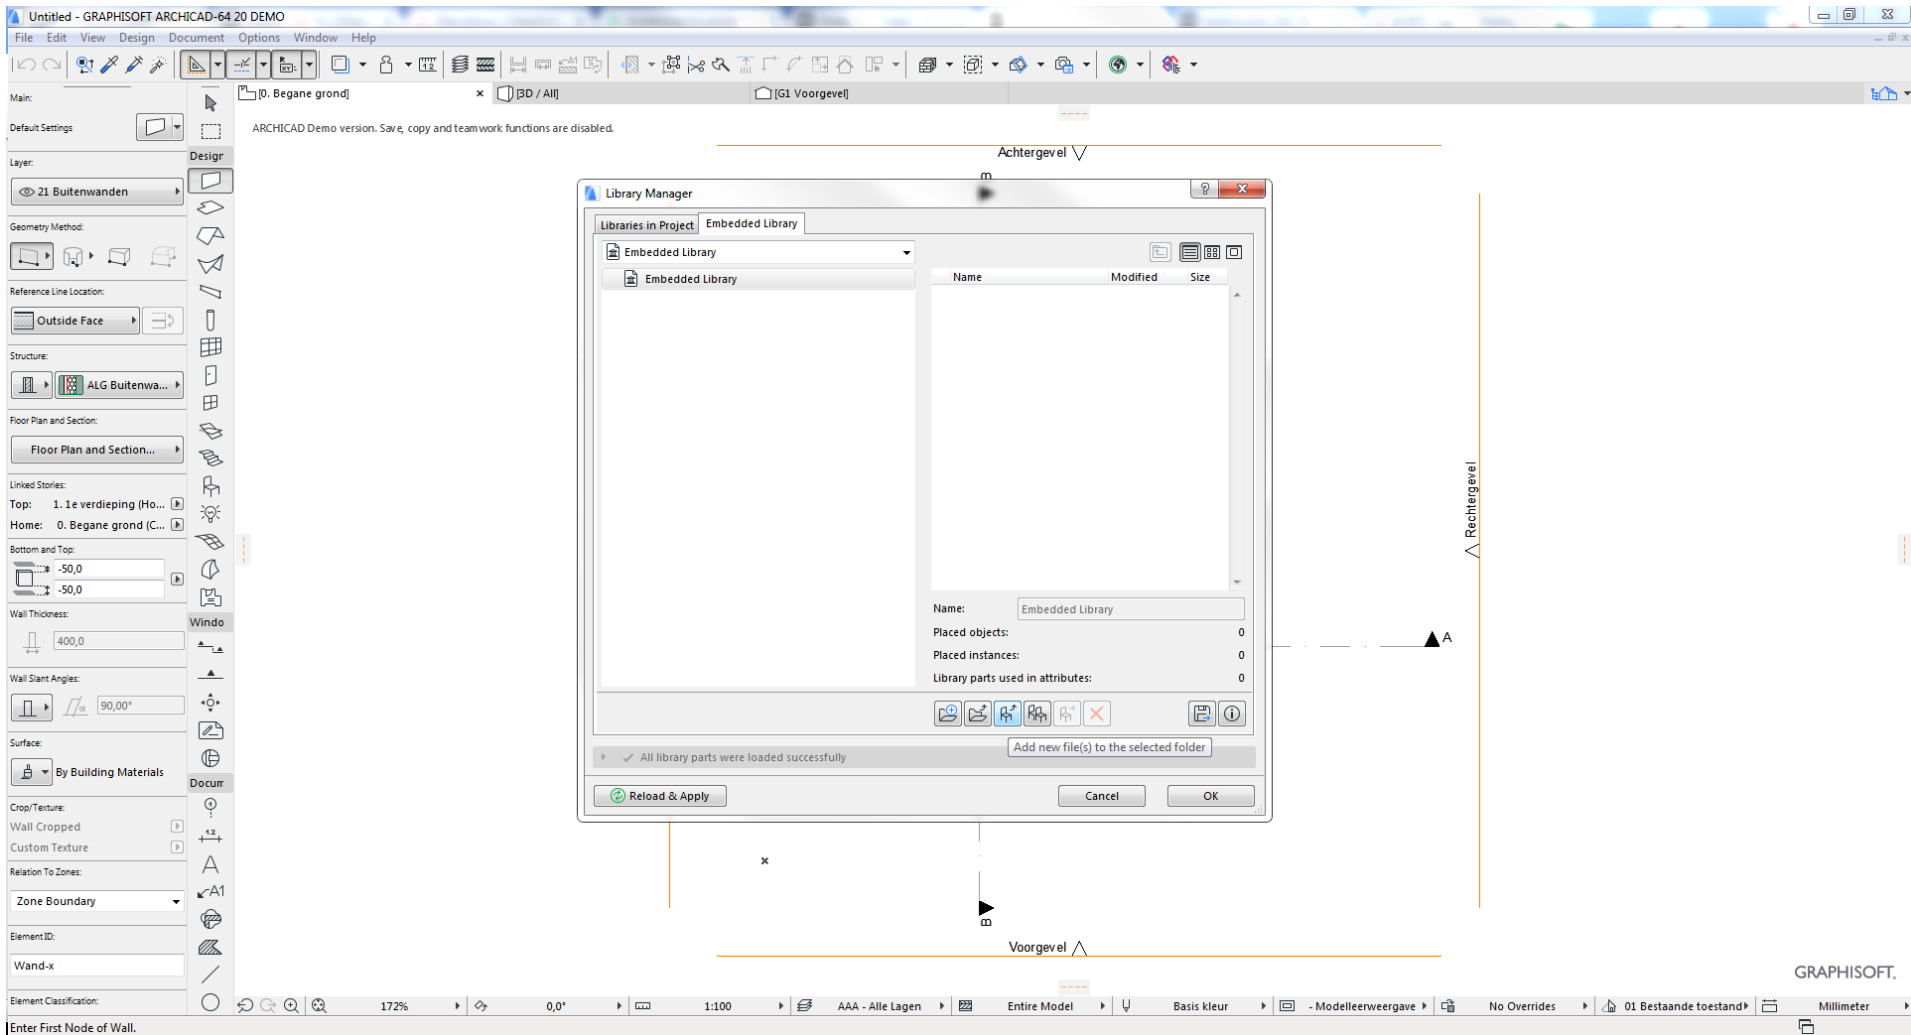


Open the **Embedded Library** tab and select **Add new file(s)**

Import instruction **ArchiCAD** (v1)

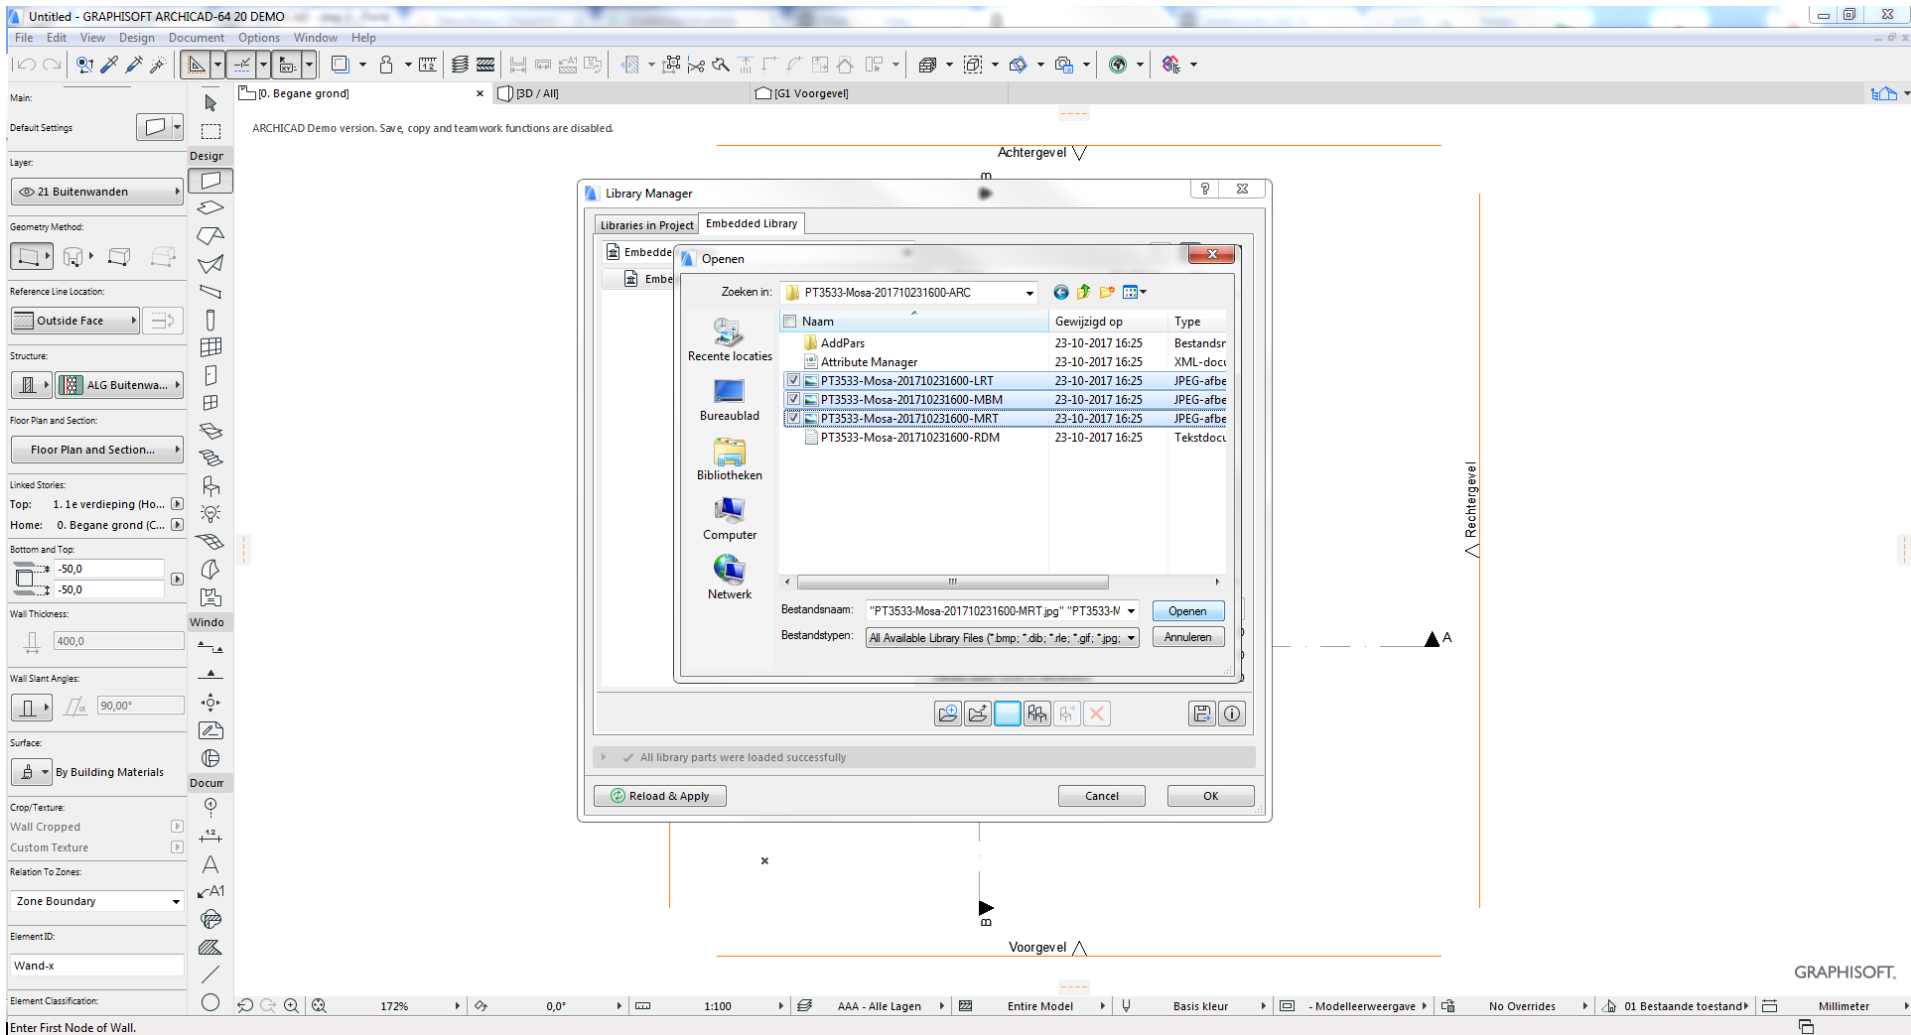


Open the exported images files from the **Mosa Pattern Generator**
IMPORTANT: the downloaded .zip file needs to be unpacked first

Import instruction ArchiCAD (v1)

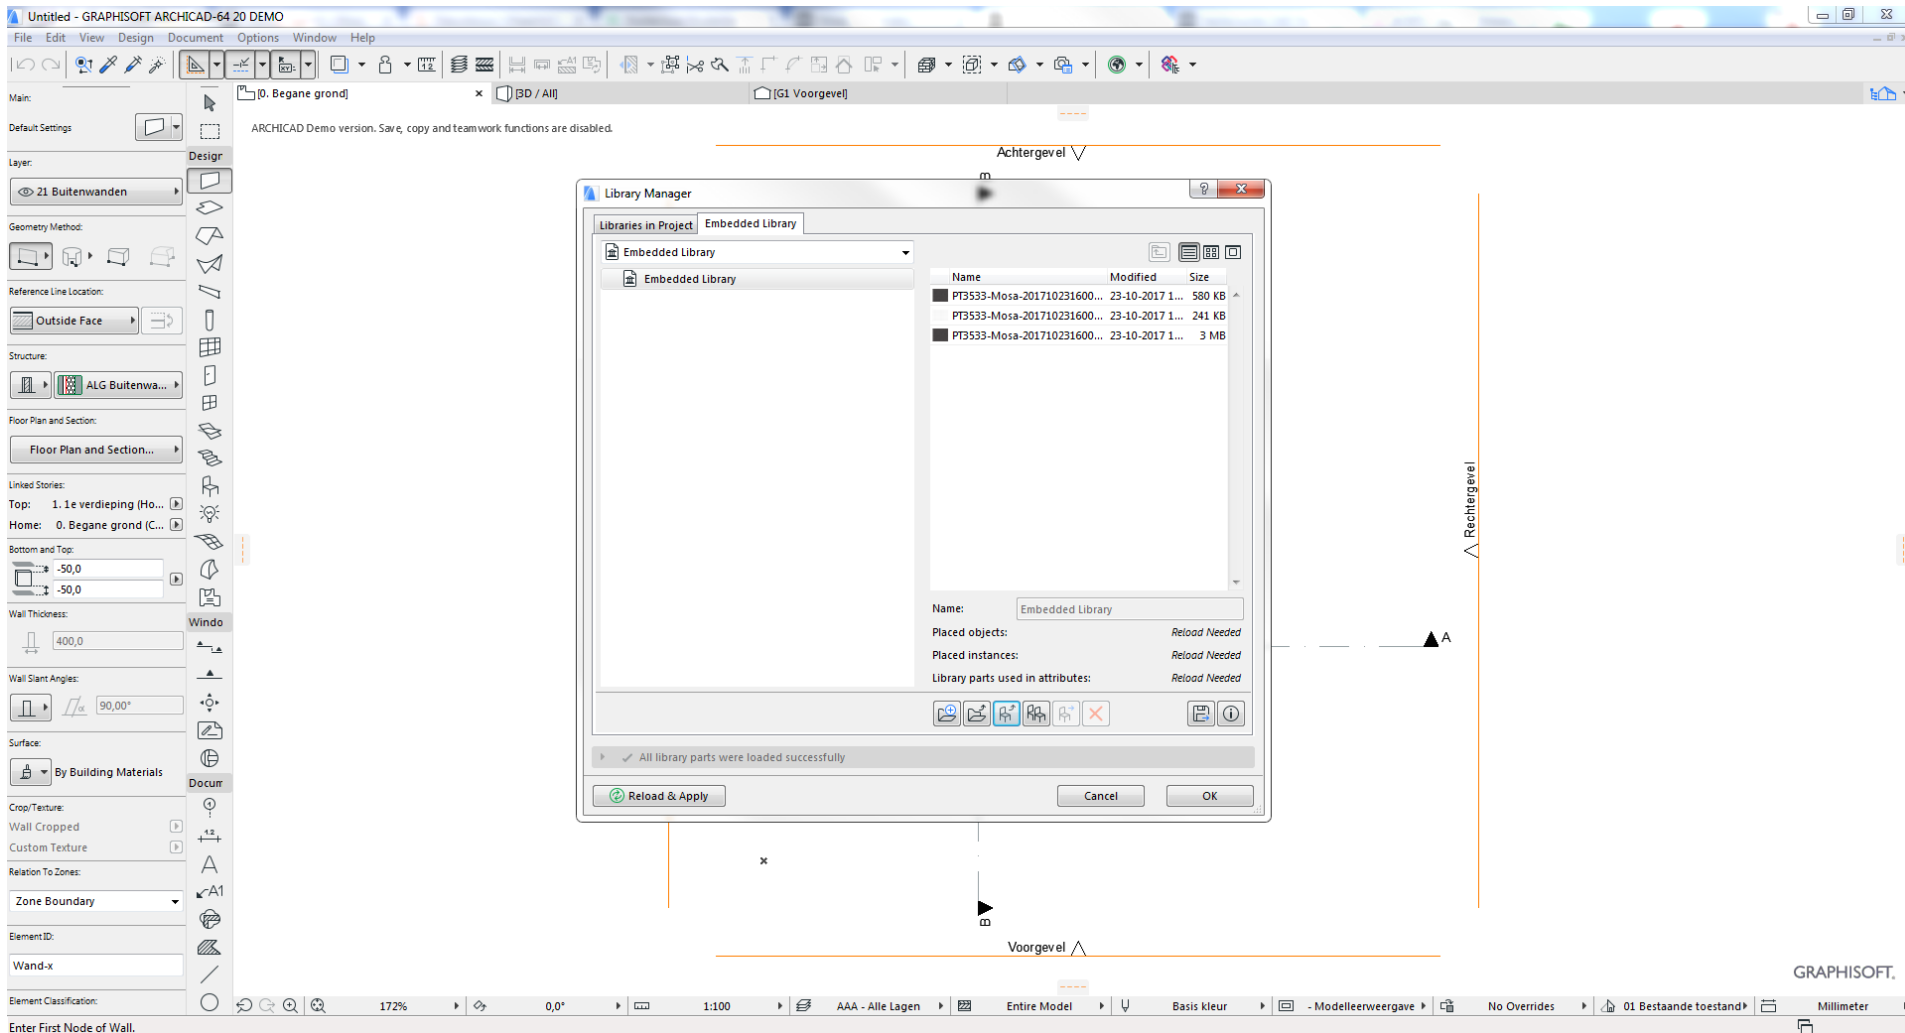


The files are added to the **Embedded library**.
Press **OK** to continue

Import instruction ArchiCAD (v1)

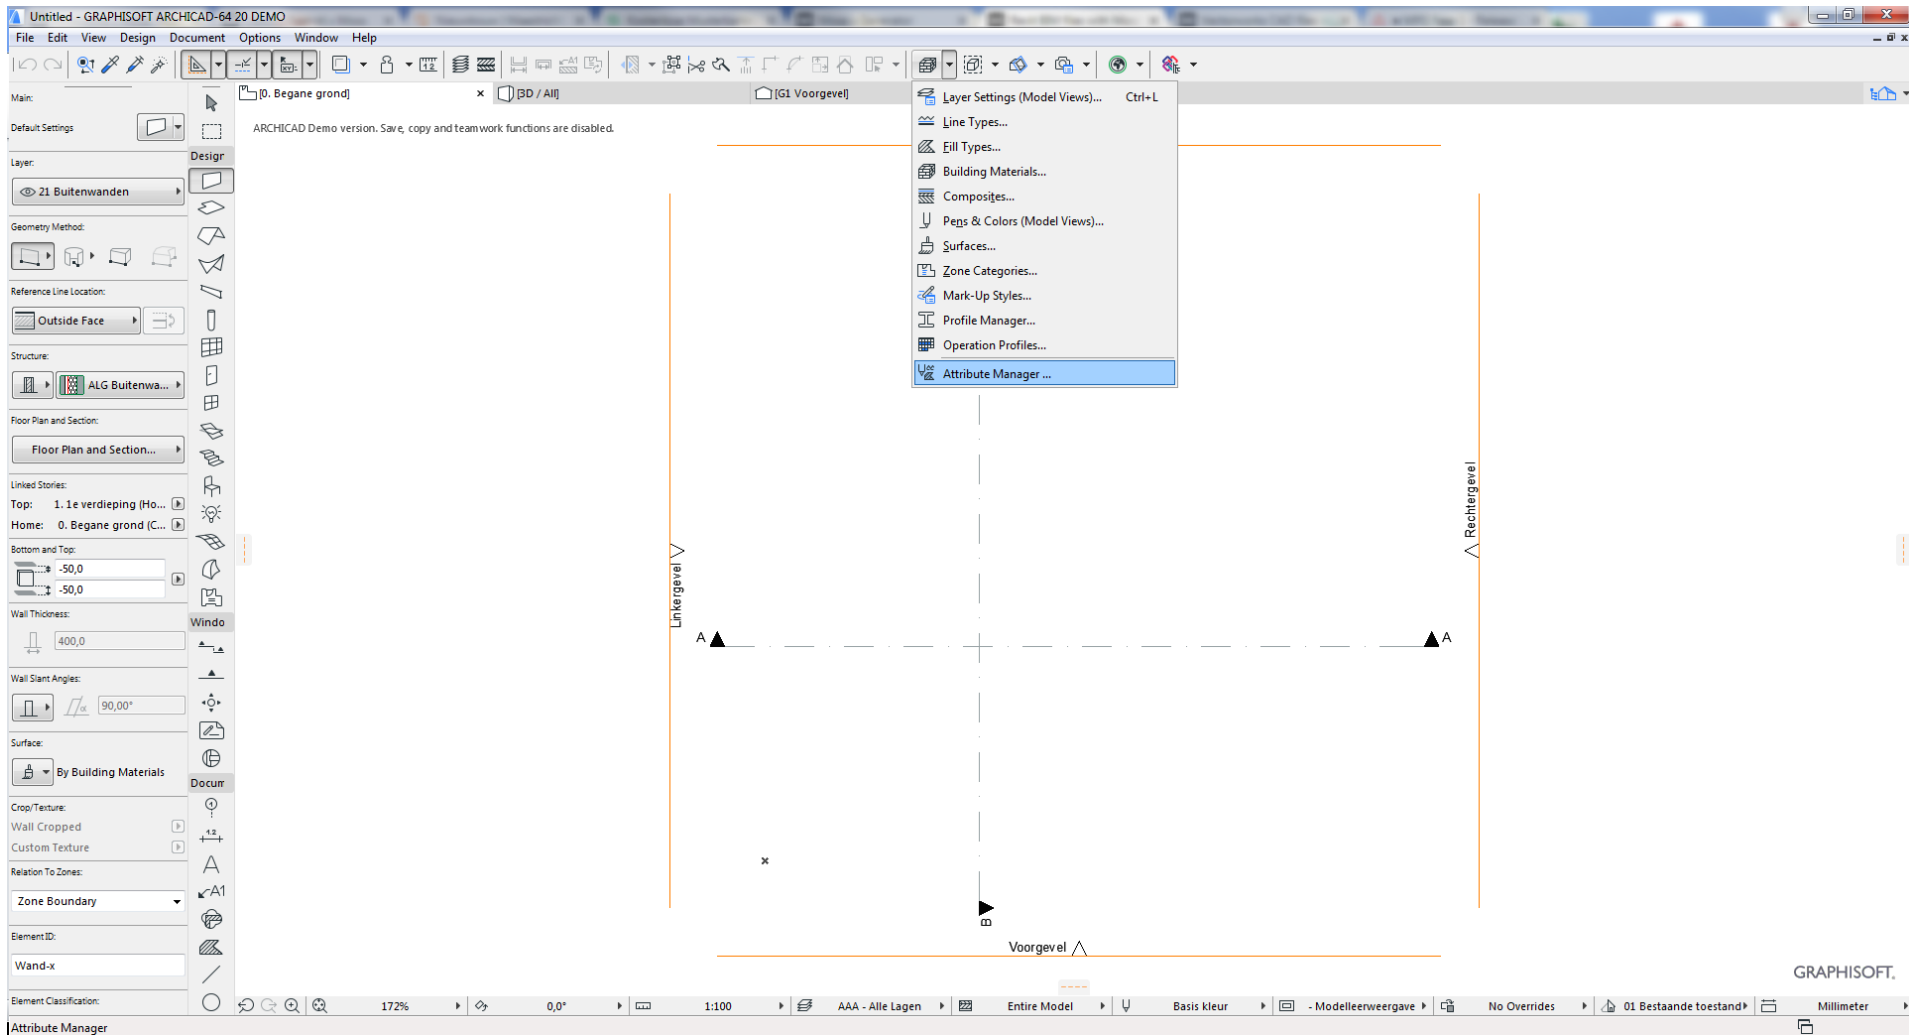


Go to the **Attribute Manager**

Import instruction ArchiCAD (v1)

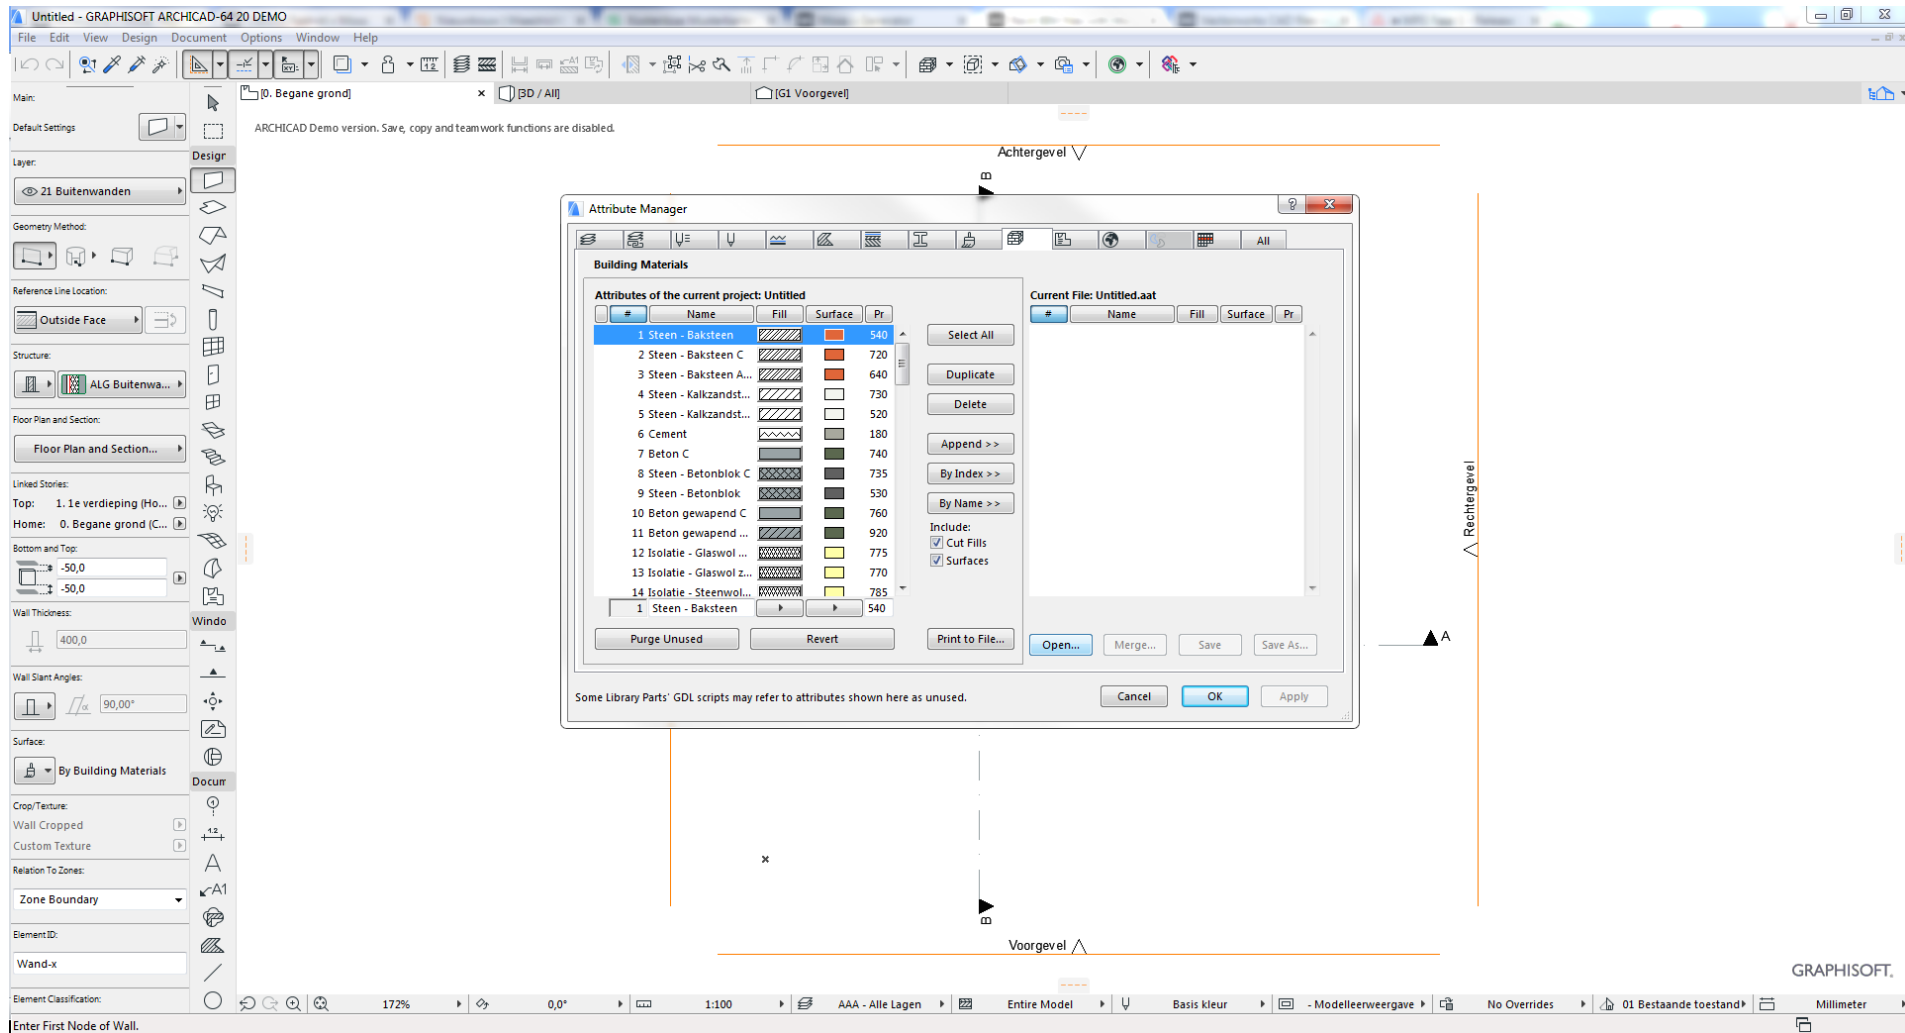


At the **Building Materials** tab press **Open**

Import instruction ArchiCAD (v1)

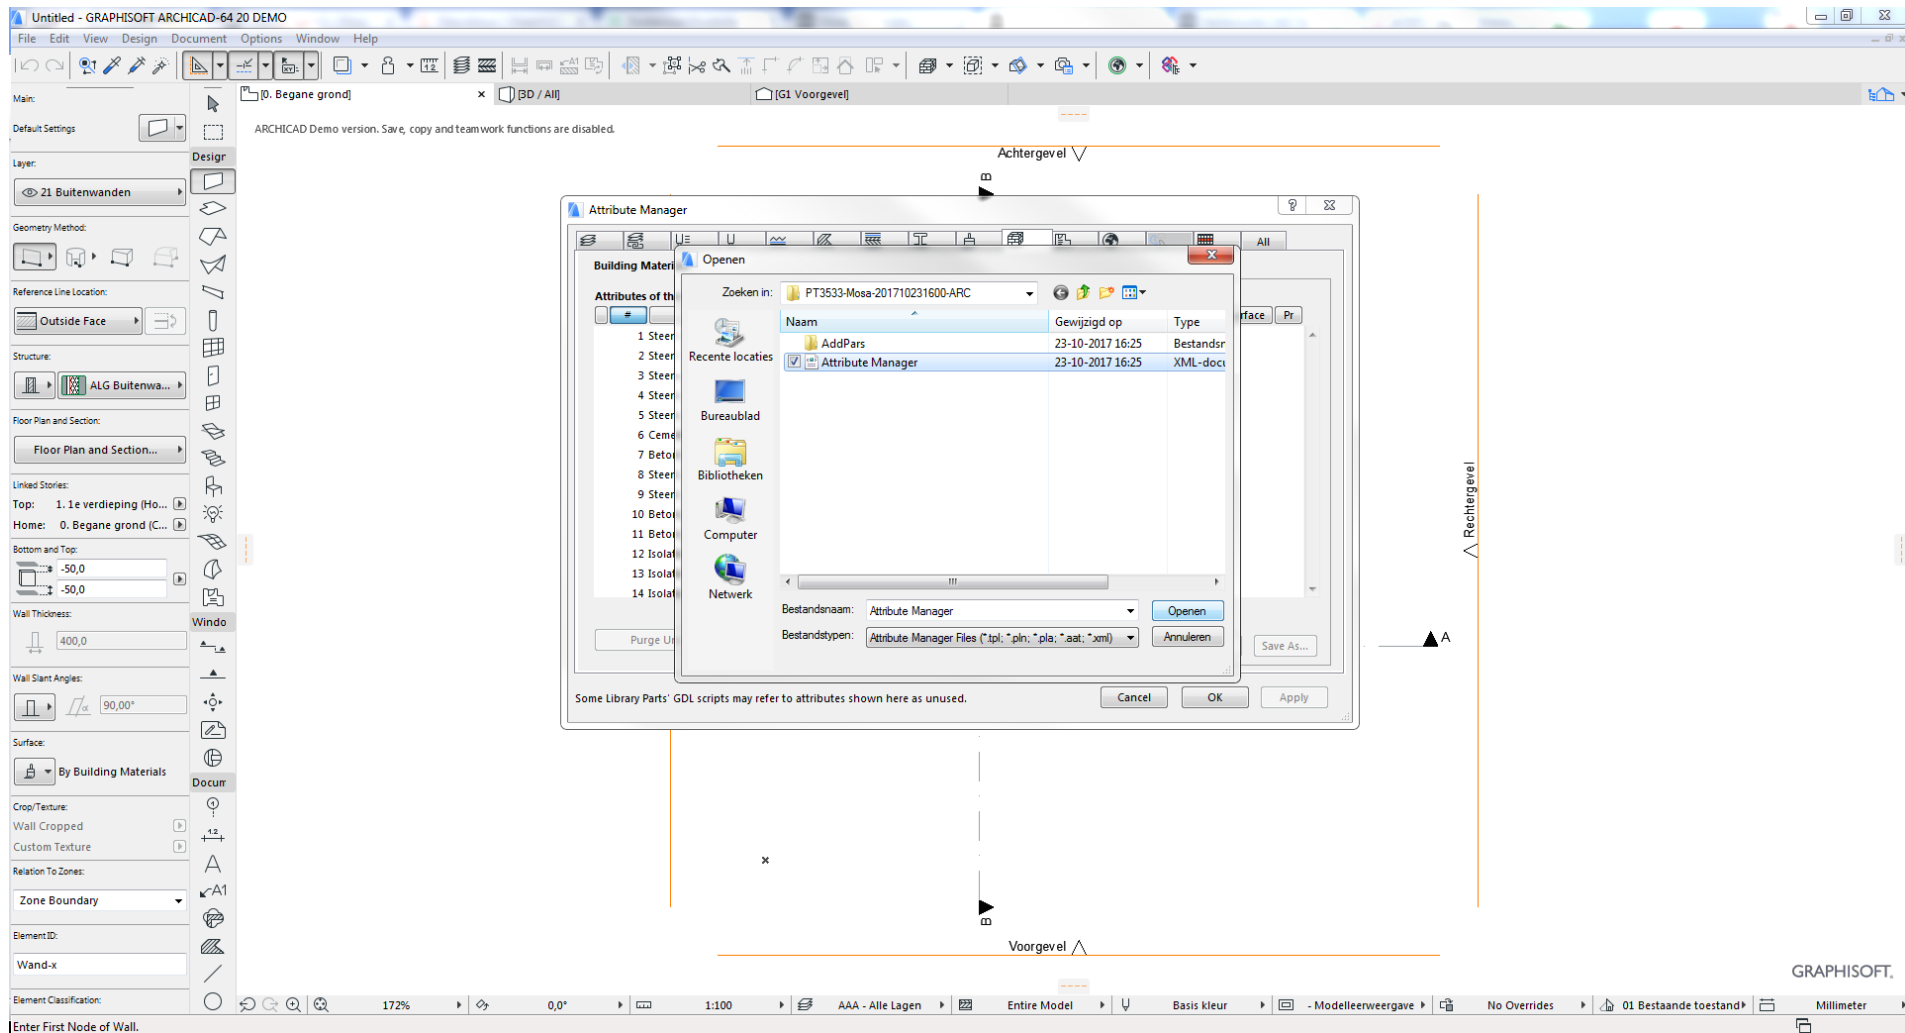


Select the **Attribute Manager** file from the export file from the **Mosa Pattern Generator**
Press **open** to continue

Import instruction **ArchiCAD** (v1)

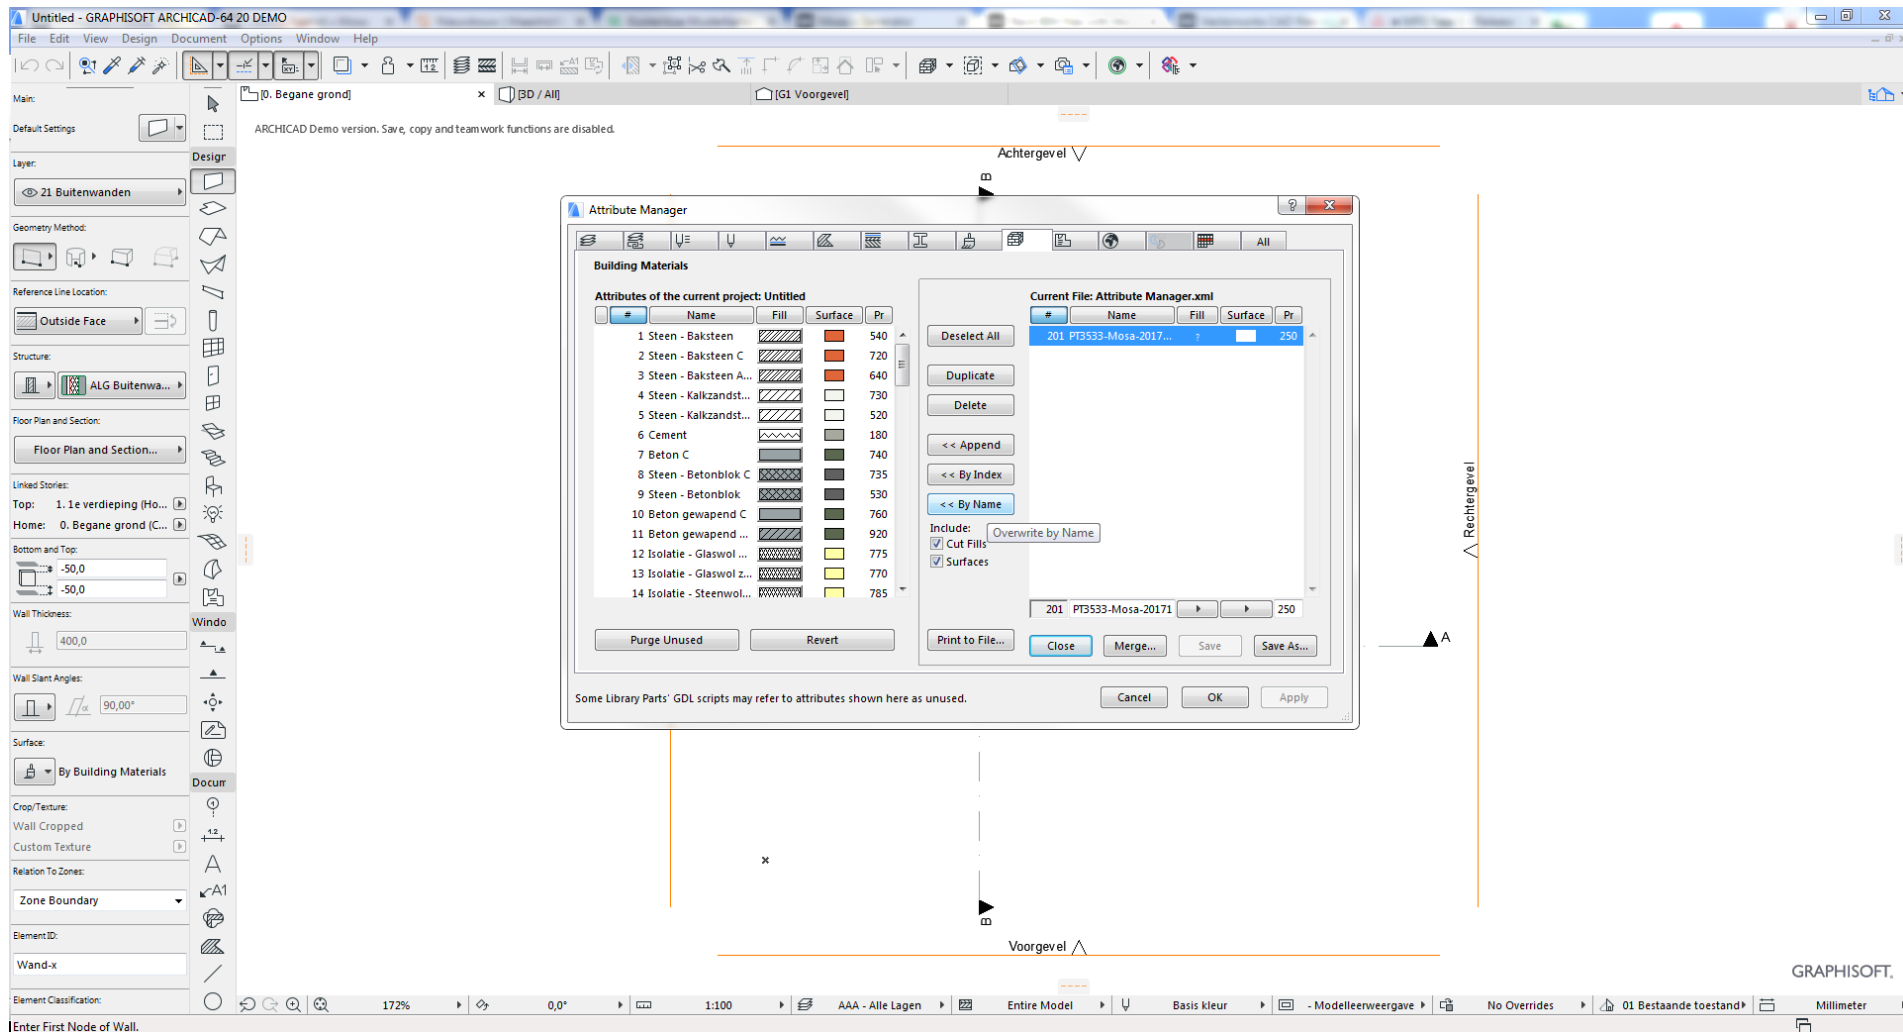


Press the <<**By Name** button and press **Apply**

Import instruction ArchiCAD (v1)

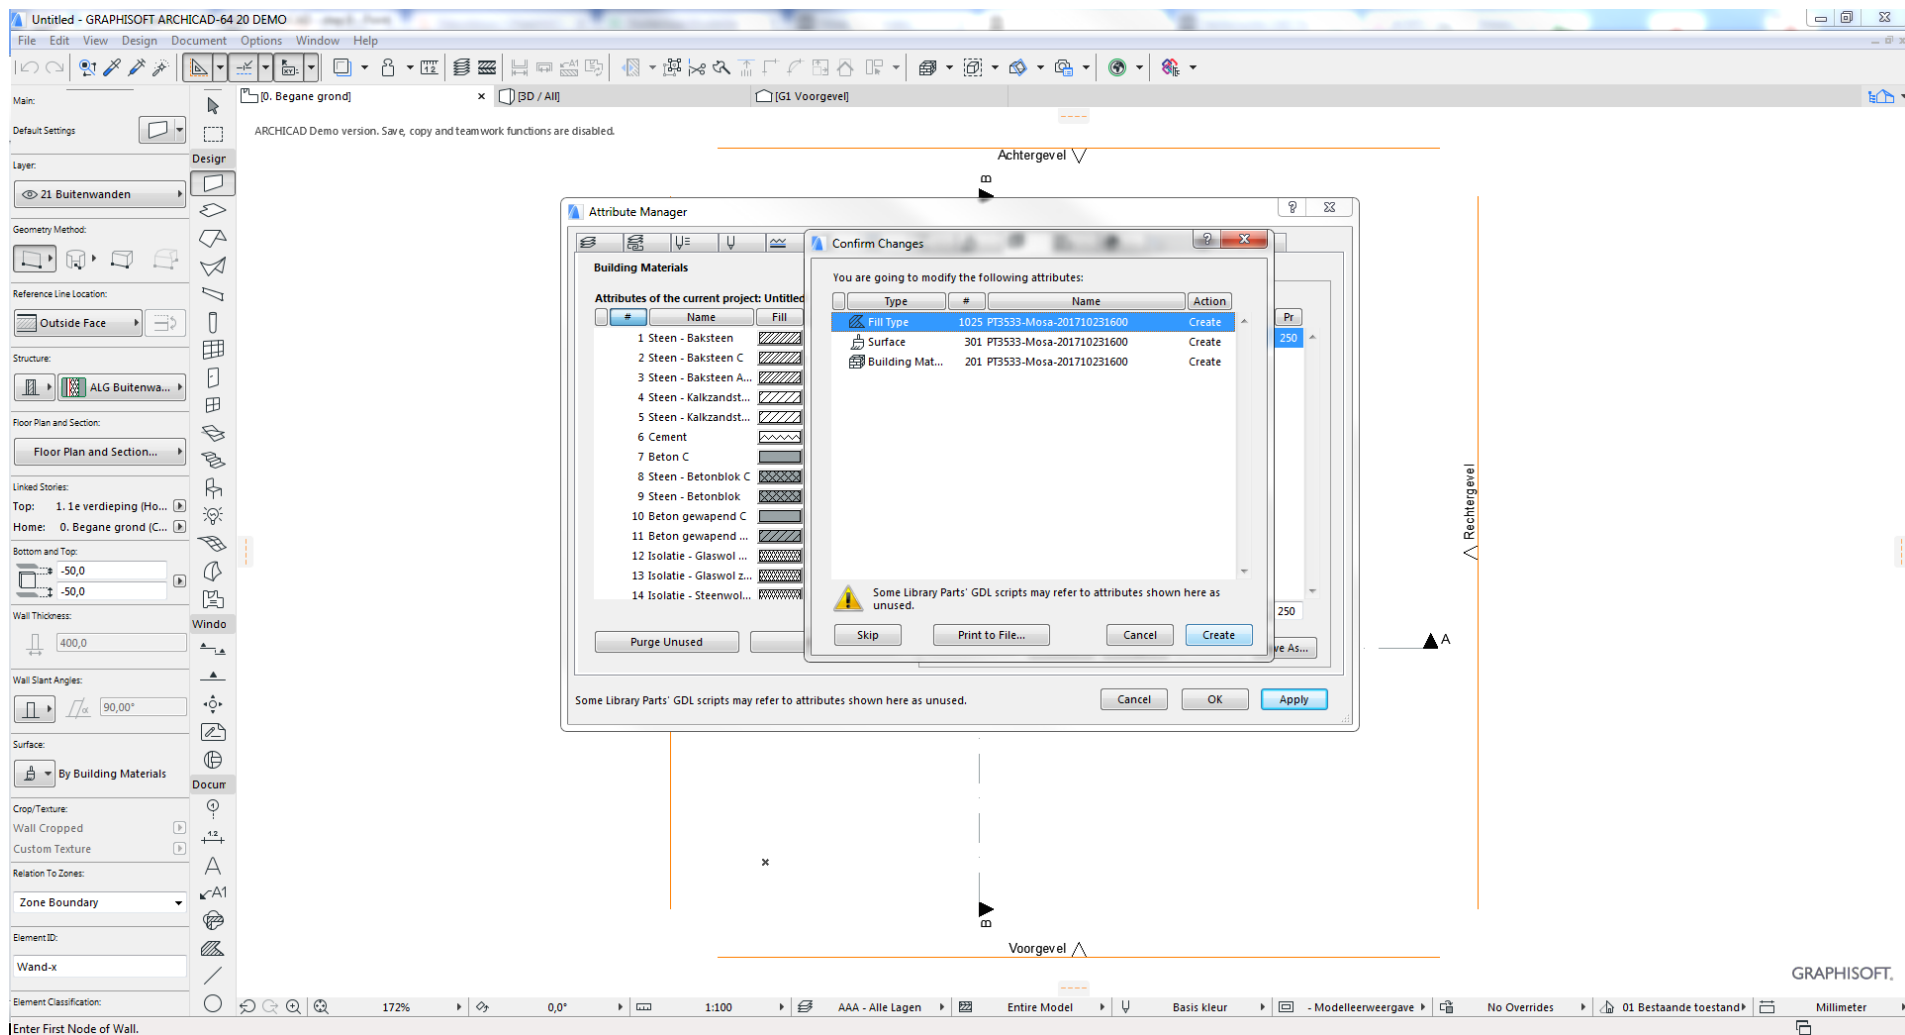


Continue by pressing **Create**

Import instruction ArchiCAD (v1)

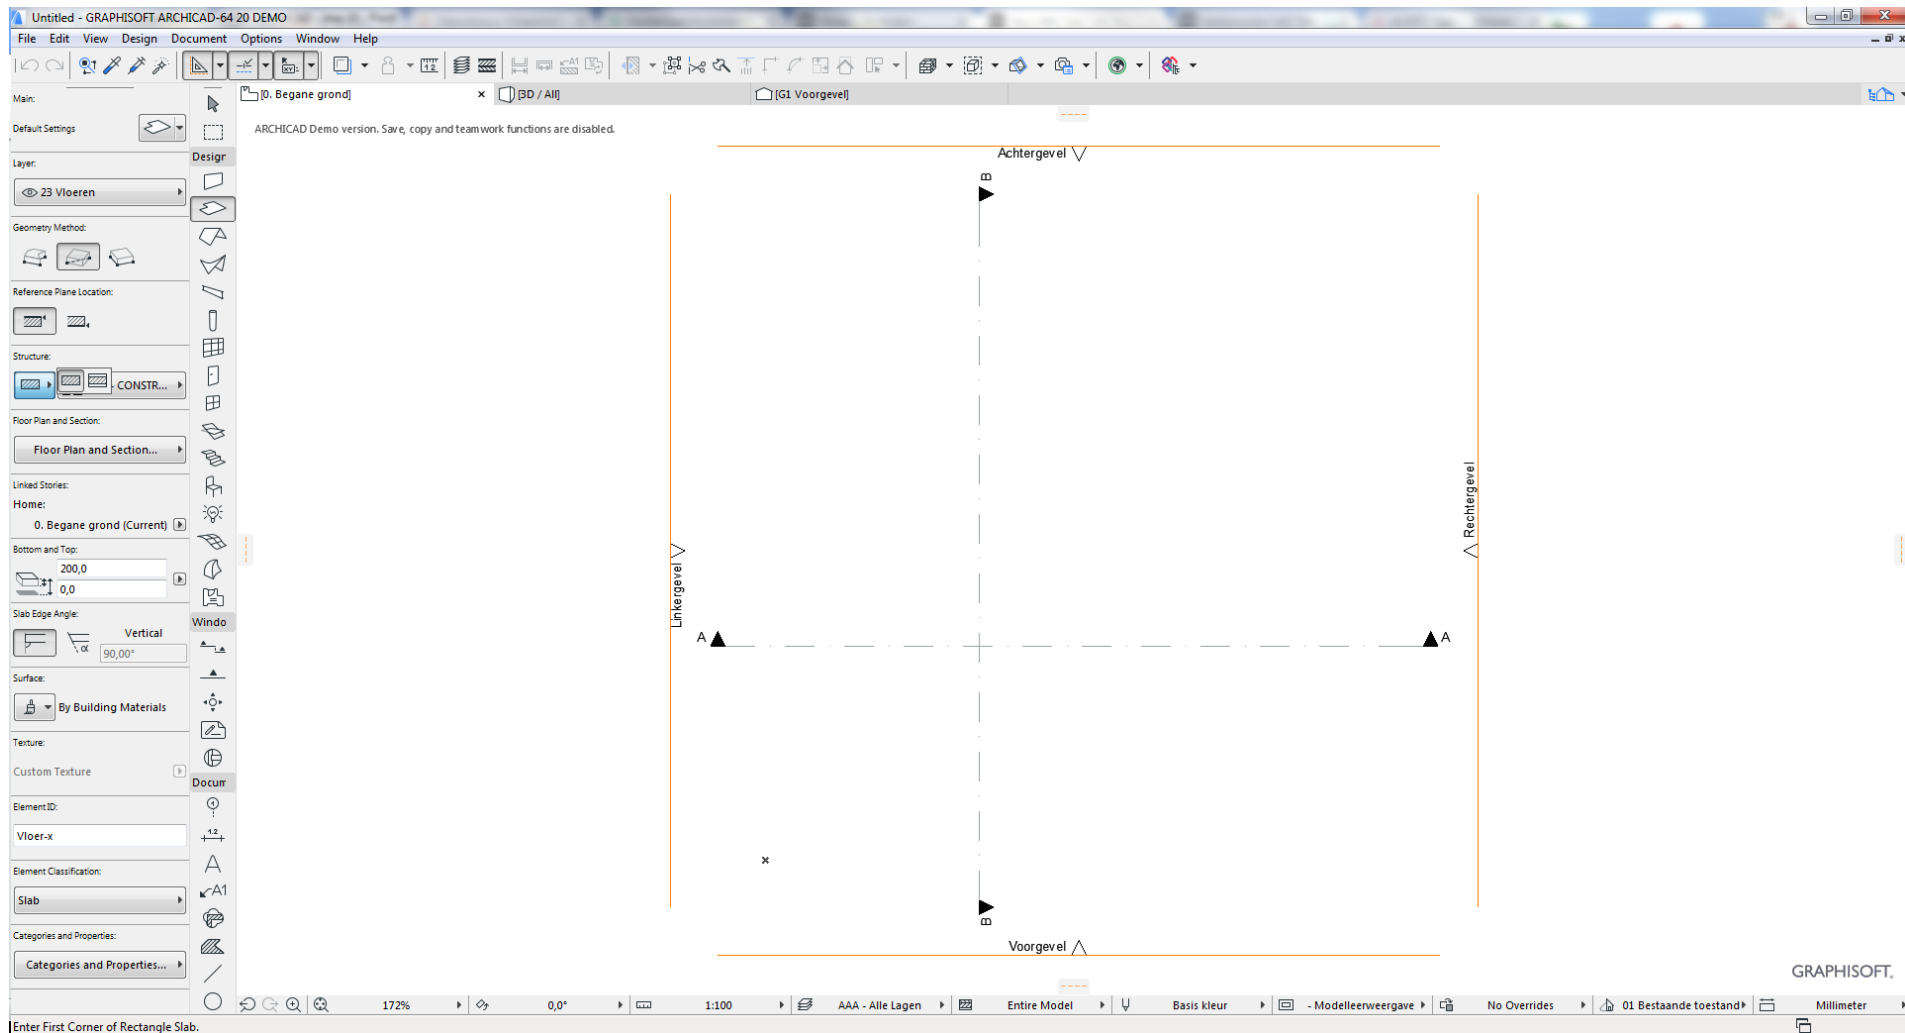


To draw the pattern select the **wall** or **floor** element and select the one layered item at Structure

Import instruction **ArchiCAD** (v1)

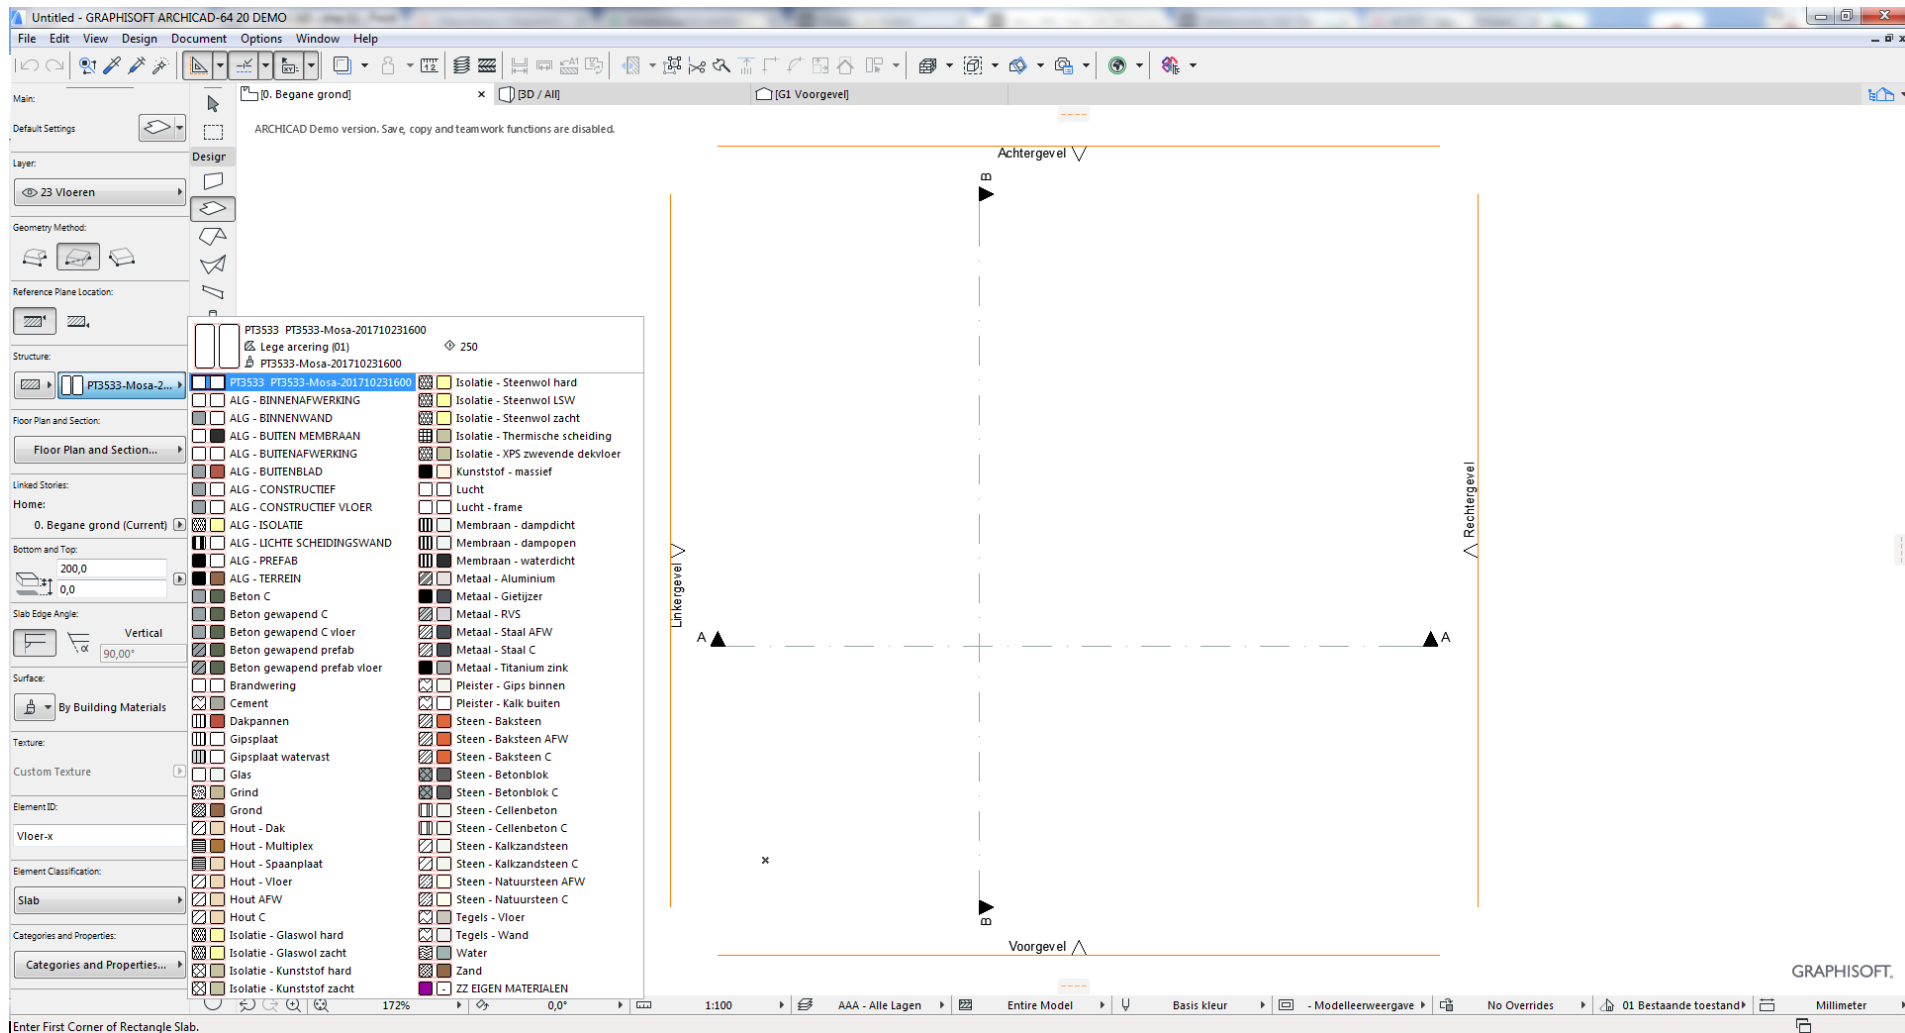

The imported pattern is now available to draw within your drawing

Import instruction ArchiCAD (v1)

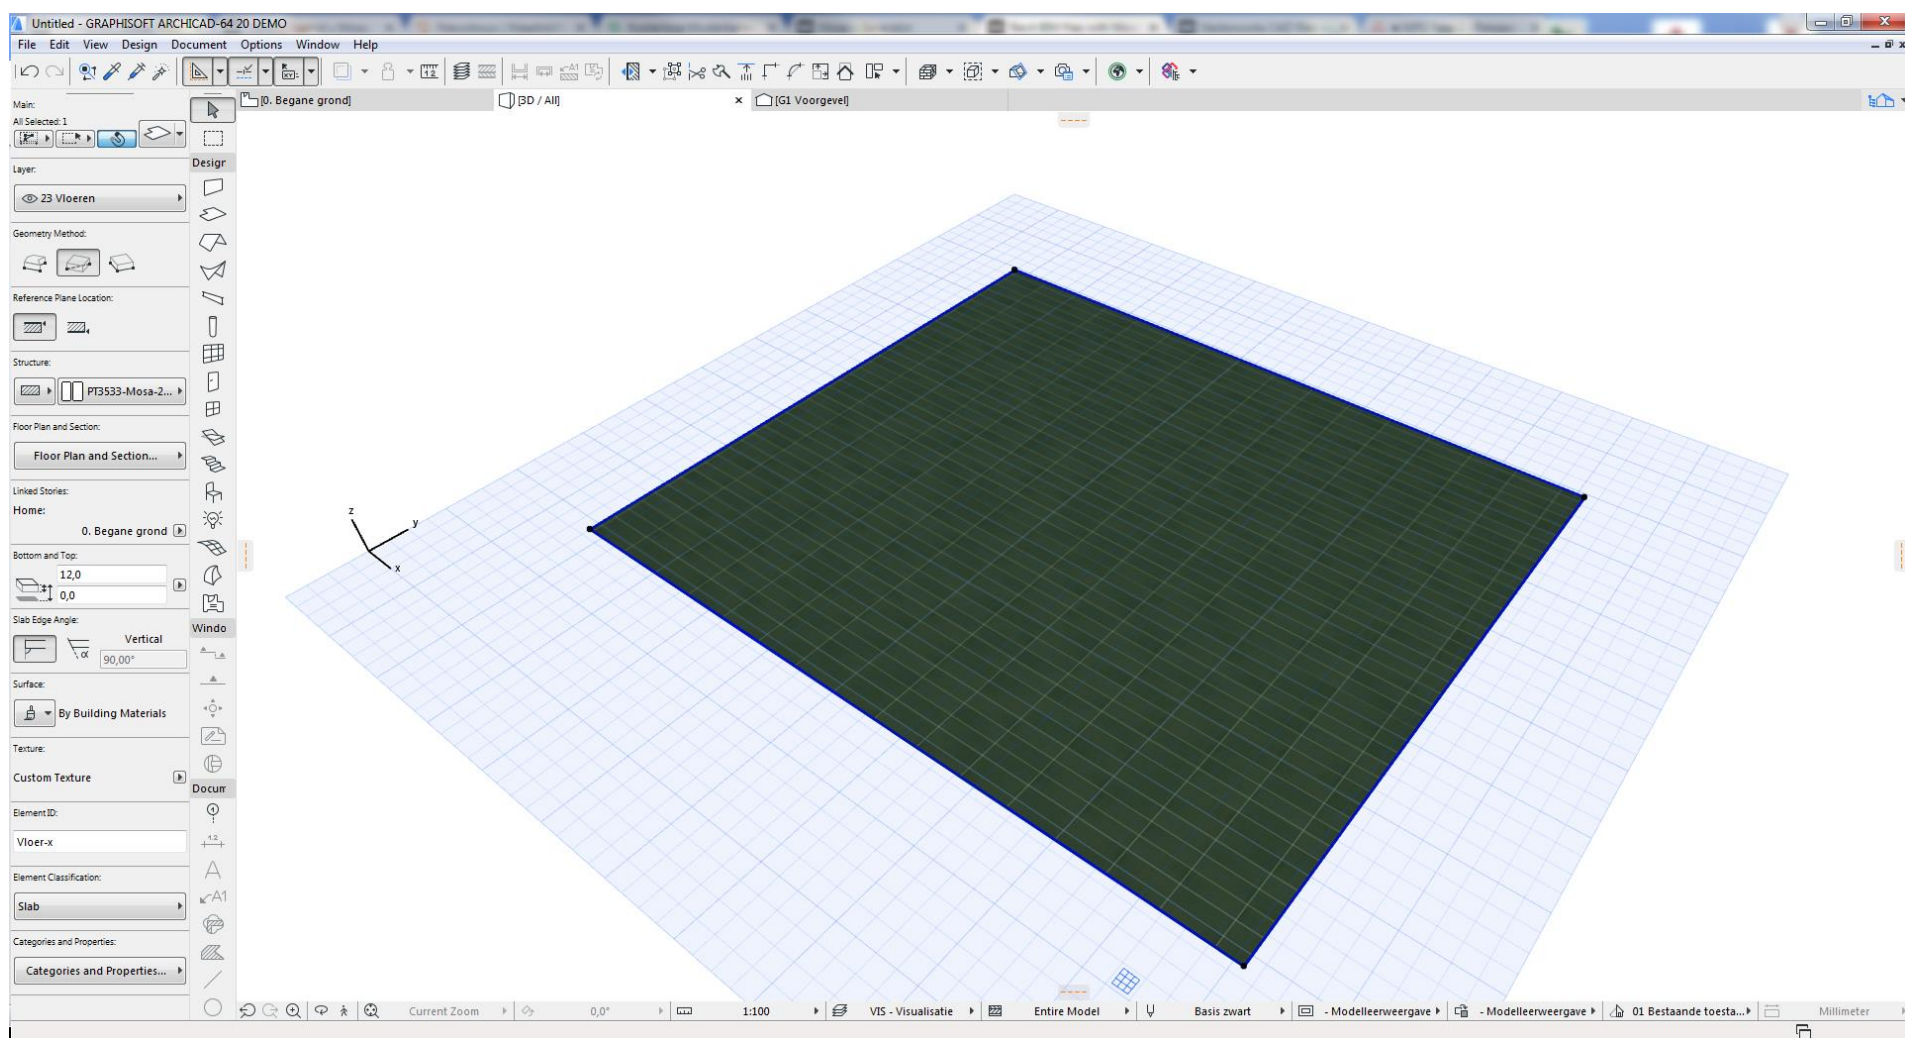

View and make adjustments to the position of the pattern in **3D mode**